How to properly install camera cable?

✗ **Don't**

✗ **Don't**

➡

Use This

L Style Cam Cable

Stretch
1 inch (or) 25mm

2inch (or) 50mm

OK

2inch (or) 50mm

Stretch
1 inch (or) 25mm

OK
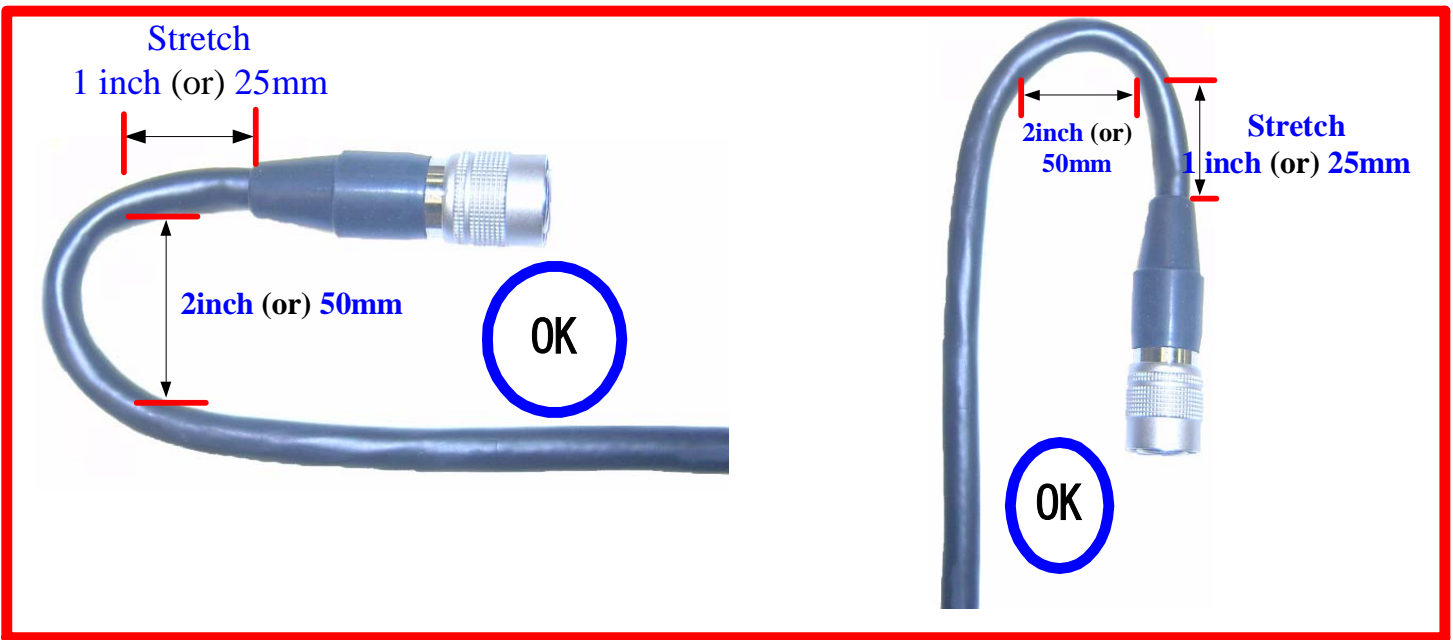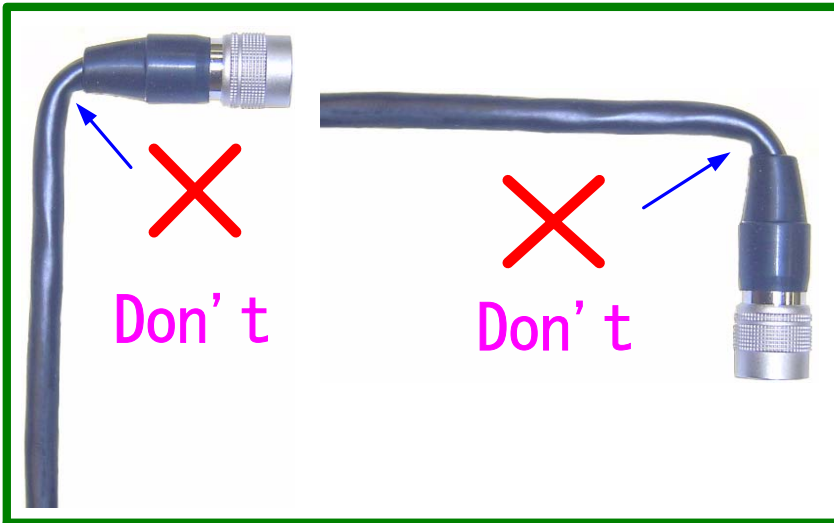
Use This

L Style Cam Cable Adapter

➡

(Up Side)

U

ADP will come out at the pin No(1).

CCD CAMERA CONNECTOR

ADP will come out at the pin No(7).

(Left Side)

L 3

7 R

(Right Side)

1 7
3
5

ADP will come out at the pin No(3).

(Down Side)

D

ADP will come out at the pin No(5).